

EMO-410 SSR Driver Output Module

 
 
Code	: EMO-410 SSR Driver output module
Function	: SSR driver output
Output rating	: max. 26 mA, 22 V $\overline{\text{---}}$
Dielectric strength	: From device supply to module output _ 2kV \sim From device ground to module output _ 500V \sim
Insulation resistance	: From device supply to module output _ >999,9M Ω hm From device ground to module output _ >999,9M Ω hm
Overall size of the equipment	: 14mm x 30,7mm x 41,4mm
Applicable products	: ESM-4450, ESM-4950, ESM-9450, ESM-4400, ESM-4900, EZM-4450, EZM-4950

PACK LIST

Please visual check

- 1 piece of EMO-410 SSR driver output module
- 1 piece of EMO-410 module presenting label

Module labels



Modul presenting label




Front side label



Rear side label

Before the module installation you must read instruction manual of which applicable product.

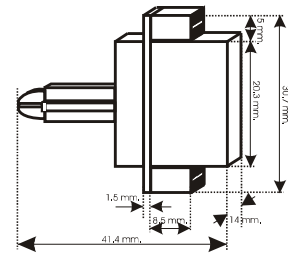

Thank you very much for buying EMKO`s product.




Installing and Pulling Out Input/Output Modules




First, detach all cable connections from the controller and uninstall it from the panel.



Press to the lock pins where top and bottom of the controller.

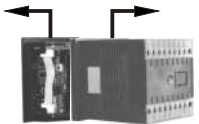


Pull the cover case with your other hand from front panel to rear side.

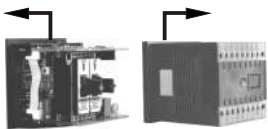

Pull out the cover case from the controller



 Slide input/output modules into socket. Pull out the module from it's socket, instead of this module install the new one or other module user wants to use.






Replace the cover case by taking care of the terminal numbers should be at right orientation.



After adding or changing modules to the unit, these changes must be taken into consideration while mounting of the unit to the system. If mounting is incorrect, it can cause accidents to harm system, operator or person who does the mounting. Responsibility of these kind of harmful events belongs to the user.



After the module installed to the device succesfully, please stick on module presenting label where to participate in the module packet, to suitable module presenting box where on the device label.

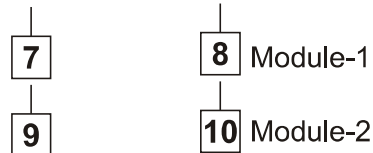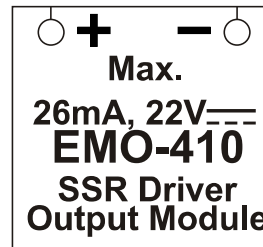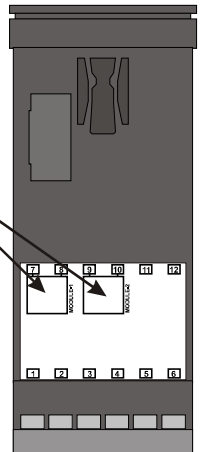

Module presenting label

