

Digalox DPM72-AV Instruction manual (Rev-2018-09)

Package contents: Panel meter Digalox DPM72, 5 × jumpers, 1 × mounting bracket

1. Intended use



- Indoor use non condensing, non corrosive.
- Panel mounting.
- Failure to comply with these instructions will void all guarantee and warranty.

2. Safety instructions

- **Note: The measurement inputs of the device can carry life-threatening voltages!**
- **When working on the device hazardous voltages must not be connected to the device!**
- **The device must not be used as the only protective device or protective shutdown.**
- Read instruction manual carefully before operating the device!
- The device is not intended to protect persons or facilities against harm. Specific devices must be used to guarantee safety (protection relays, cut-off switches, etc.).
- When connecting switches to the terminals J1-J6, only switches must be used whose isolation voltage is at least twice the maximum occurring measurement voltage. For example, when measuring 250 V AC switches must be isolated for at least 500 V.
- Do not open the housing!
- Do not use the instrument in the presence of explosive or flammable substances!
- All cables carrying hazardous voltages must be secured with external separators.

3. Description

The measurement modes volt AC/DC, ampere AC/DC, frequency and 5 A current transformer are supported. Scale endpoint of the indicator as well as scaling of the analogue signal and current transformer measurement can be adjusted freely via the DIP switch, alternatively the option for automatic adaption of the scale endpoint can be used. The unit can be switched between volt and ampere measurement via an external switch. Minimum and maximum values are recorded and can be displayed optionally using an external switch. Measured values are recorded over a time span of 3 minutes up to 14 days. The time base as well as the display of the measuring history can be activated by an external switch. The measured values remain stored as long as the device is supplied with voltage.

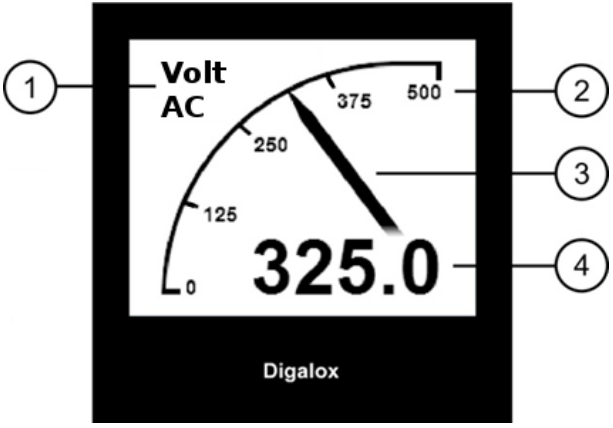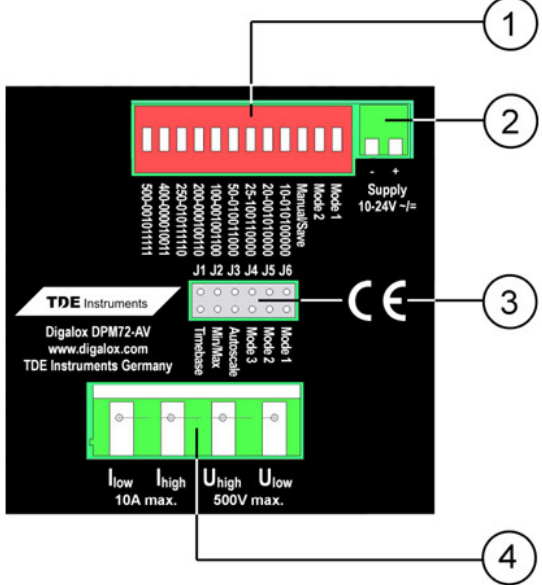	<p>Front</p> <ul style="list-style-type: none">1 Measure mode text2 Upper scale caption3 Graphical measurement display4 Digital measurement value
	<p>Back</p> <ul style="list-style-type: none">1 DIP switch for setting measurement mode and upper scale caption2 Supply voltage input3 Jumpers for configuration or connection external switch for activating/switching measurement mode, graphical historic data display, min/max display, auto-scaling4 Measurement inputs

4. Electrical Connections

The device may only be operated in one of the connection options shown below.

<div><p>Supply</p></div>	<div><p>Voltage direct</p></div>
<div><p>Current direct</p></div>	<div><p>Current and voltage direct</p></div>
<div><p>Current via current transformer</p></div>	<div><p>Current via current transformer, voltage direct</p></div>

5. Configuration

The device can be configured via DIP switches and jumpers.

Scaling

In modes where a scaling is necessary to represent the correct measurement value (for example 5 A AC for current transformer) the upper scale value corresponds to the primary value of the current transformer.

Example: upper scale value = 50 = primary value of the current transformer

Configuration via DIP switches and jumpers if only one measurement mode is required (Manual mode)

1. Set DIP switch 10 to ON position.
2. Set measurement mode with jumpers at J4-J6 according to table "Measurement mode", column "Manual mode".
3. Set upper scale caption for the first measurement mode with DIP switches 1-9 (see "Configuration of the upper scale caption").
4. Connect supply voltage.

Configuration via DIP switches and jumpers if it is required to switch between multiple measurement modes via an external switch (Save mode)

The required measurement modes are configured and saved sequentially.

1. Connect supply voltage.
2. Set DIP-switch 10, 11 and 12 to OFF position.
3. Set the measurement mode with jumpers at J4-J6 according to table "Measurement mode", column "Save mode".
4. Set DIP switch 10 to ON position.
5. Set upper scale caption for the first measurement mode with DIP switches 1-9 (see "Configuration of the upper scale caption").
6. Set time base for graphical historic data display (optional, see "Other settings").
7. Set DIP switch 10 to OFF position.
8. "Saved" appears on the display. The configuration of the first measurement mode is now completed.
9. When using multiple measurement modes repeat steps 2-8 until all required measurement modes are configured. The time base does not need to be set again, as it is used for all measurement modes.
10. In operation the measurement modes can be changed with a switch at J4-J6 according to table "Measurement mode", column "Save mode".

Configuration of the upper scale caption

The upper scale caption is binary coded using DIP switches 1-9. Possible values are 1 to 500. Switch 1 corresponds to 256, switch 2 corresponds to 128, switch 3 corresponds to 64, etc., switch 9 corresponds to 1. For configuration, proceed as follows:

1. Connect supply voltage.
2. Set DIP switches 1-9 to OFF position.
3. Set DIP switch 10 to ON position.
4. Start with 1st switch.
5. Set switch to ON position.
6. If the displayed value is greater than the desired value, set the switch back to OFF position.
7. If the displayed value is less than the desired value, leave the switch in ON position and move on to the next switch.
8. Repeat steps 5 to 7 until the desired value is displayed.

Table common switch combinations


Value	Combination (DIP switch 1-9)	Value	Combination (DIP switch 1-9)
10		150	
20		200	
25		250	
50		400	
100		500	

Table measurement mode

Measurement mode	Display	Scale	Manual mode	Save mode
V AC direct	Volt AC			
A AC direct	Ampere AC			
V DC direct	Volt DC			
A DC direct	Ampere DC			
AC Frequency	Freq. Hz			
5 A AC scaled (Current transformer)	Ampere CT	Upper scale caption		
1 A AC scaled (Current transformer)	Ampere CT	Upper scale caption		

6. Other settings

The following functions can be activated independently by short-circuiting connectors J1-J3 by jumper or switch during operation:

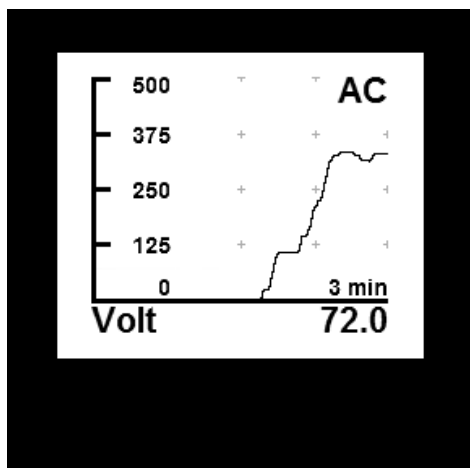


J1: Graphical historic data display

To activate the graphical historic data display connector J1 is shorted. The unit displays the stored values within the set time base as a graphical trend.

The time base can be set to days (7, 14), hours (6, 12, 24, 48, 72) or minutes (3, 15, 30, 60).

The time base can be changed by alternately opening and closing J1 (interval < 2 sec). When first opening and closing J1 the current time base is displayed. For each subsequent opening and closing the time base changes to the next setting. In order to save the setting permanently, DIP switch 10 must be switched from ON to OFF position.

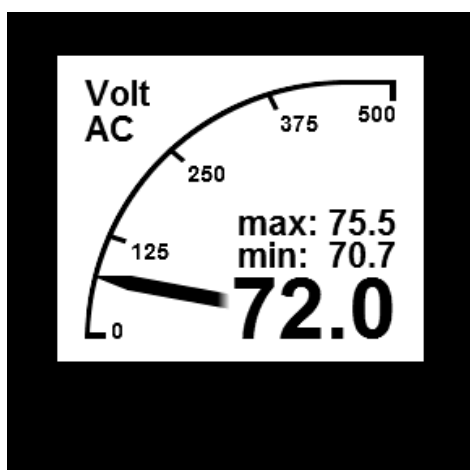

J2: Min-Max-display

To activate the Min-Max display connector J2 is shorted. The display shows the maximum and minimum values recorded since the last reset. The values can be reset by opening and closing connection J2 shortly (interval < 2 sec). The display shows "Minmax reset".

J3: Auto scaling

To activate auto-scaling J3 connector is shorted. The device automatically changes the upper scale caption depending on the current measuring value between 10, 100 and the set upper scale caption.

7. Mounting

Carefully insert the instrument into the panel cut-out. Insert the mounting bracket from the back and push towards the panel until the instrument sits tight. Make sure the mounting bracket is snapped into the side of the housing. To ensure IP65 protection (dust and water jet) when mounting in a front panel, use optional gasket (separately available).

8. Specifications

	DPM72AV
Supply	10 - 24 V AC/DC
Display	LCD graphic display 192 × 160 pixels
Measuring range voltage	±500 V AC/DC
Accuracy voltage	±1 % true RMS
Internal resistance voltage	2.6 MΩ
Measuring range ampere	± 10 A AC/DC and 5 A AC for current transformer
Accuracy ampere	±1 % true RMS
Internal resistance ampere	5 mΩ
Measuring range frequency	10 - 500 Hz
Accuracy frequency	±0.1 Hz
Recording of measurement	3 min to 14 days
Operating temperature	0 °C to +50 °C
Storage temperature	-20 °C to +70 °C
Front panel	72 mm × 72 mm
Panel cut-out	68 mm × 68 mm
Protection front	IP65 from the front

9. Cleaning

Observe the safety instructions before cleaning the instrument. Clean the instrument with a dry lint-free soft cloth. Do not use solvents.

10. Contact Information

TDE Instruments GmbH, Gewerbestraße 8, D-71144 Steinenbronn

Phone: +49 7157-20801

E-Mail: info@tde-instruments.de

Internet: www.tde-instruments.de, www.digalox.com